
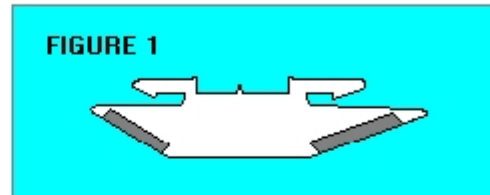


USAF - F15 EAGLE

#1 CUT ALL PIECES AND MARK THE BACK SIDE WITH THE APPROPRIATE LETTER FOR FUTURE REFERENCE. **NOTE: ALWAYS CUT SLIGHTLY ON THE COLOR SIDE FOR A SMOOTHER SEAM.**

#2 ON **PIECE A** FOLD THE GREY LEADING EDGE TABS TO FORM A CREASE. **DO NOT GLUE NOW.** SEE FIGURE 1.

#3 ON **PIECE B** MAKE SURE THE TWO L SHAPED CUTS ARE MADE AT THE REAR OF THE FUSELAGE. **FIGURE 2**

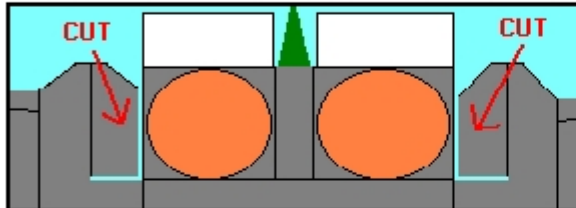

FOLD THESE TABS BACK AND GLUE THE TWO NONCOLOR SIDES TOGETHER.

#4 NEXT FOLD THE WINGS AND FUSELAGE ALONG THE BLACK FOLD LINES AND FOLD THE WHITE TABS BACK. **NOTE: ALL WHITE TABS ARE TO BE FOLDED BACK AT A 90 DEG ANGLE** SEE FIGURE 3. GLUE THE FRONT WHITE TABS TO THE INSIDE TO FORM A BOX TYPE ASSEMBLY.



#5 NEXT GLUE **PARTS A & B** TOGETHER BACK TO BACK CAREFULLY MATCHING THE OUTLINES. **NOTE: USE THE GREY LEADING EDGE TABS TO HELP ALIGN THE PARTS.** NEXT GLUE THE REAR WHITE TABS TO UNDERNEATH SIDE OF **PART A**. THEN FOLD BACK AND GLUE THE COLORED TABS INTO PLACE.


#6 NEXT FOLD AND GLUE THE TWO TAILS "**PART C**" DOWN THE CENTER LINE CAREFULLY ALIGNING THE EDGES. FOLD THE MOUNTING TABS OUT AND GLUE TO THE FUSELAGE. SEE FIGURE 4.



FIGURE 4



#6 NEXT GLUE THE THE MATCHING EXHAUST TOGETHER AS SHOWN IN FIGURE 5. WHEN THE GLUE IS DRY ENOUGH ROLL THE PIECE SO YOU CAN GLUE THE WHITE TAB TO THE OTHER SIDE. SEE FIGURE 6.

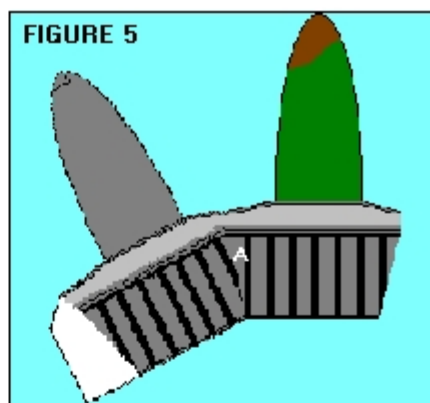


#7 THE EXHAUSTS ARE THEN GLUED TO THE FUSELAGE. MATCH THE COLORS PATTERNS OF THE PIECES TO THE COLORS OF THE FUSELAGE.



#8 NOW MOVE TO PART E THE FORWARD FUSELAGE. ROLL THIS PART IN TO A TUBE AND GLUE CAREFULLY ALIGNING THE SEAMS AND EDGES.

#9 NOW YOUR READY TO SHAPE THE NOSE CONE AND GLUE IT INTO SHAPE (PART F) WHILE THAT PIECE IS DRYING SHAPE THE NOSE WEIGHTS IN THE SAME WAY. AFTER ALL THE PIECES ARE DRY STACK ALL THE (PART G) PIECES INSIDE ONE ANOTHER AND GLUE. TRIM THE EDGES OF THE WEIGHT PIECES TO GIVE THEM AN EVEN EDGE.

#10 NOW GLUE THE NOSE WEIGHT TO THE FRONT FUSELAGE. SLIDE THE NOSE WEIGHT UNDER THE WHITE TABS OF THE FRONT FUSELAGE TAKE CARE TO ATTACH IT STRAIGHT. GLUE (PART F)

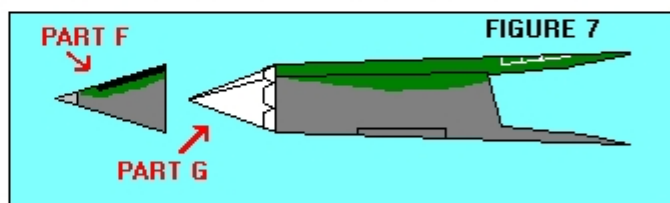

ON TO (PART G) . MAKE SURE THE PAINT MARKINGS MATCH UP.

#11 NOW GLUE THE FORWARD FUSLAGE TO THE MAIN FUSLAGE IN THE SAME WAY YOU GLUED THE EXHAUSTS ON.

#12 TAKE (PART H) AND FOLD THE WIND SCREEN ALONG THE GREEN LINES. NEXT ROLL IT INTO U SHAPE AND TUCK AND GLUE THE WHITE TABS. FOLD THE MOUNTING TABS OUT AND GLUE THE CANOPY TO THE FUSELAGE.

NOTE: FOR YOUNGER CHILDREN YOU MAY WANT TO ROUND OFF THE NOSE AND ADD MORE WEIGHT TO COMPENSATE

THIS KIT IS NOT ONLY FUN TO BULD IT ALSO IS AN EXCELLENT FLYER.

